

Assembly Instruction Sheet #IS-1148P12-1 For Style 1148P12-1


Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) LED A19 Bulb MAX 10W (Not Include).
Estimated Assembly Time: 15-30 minutes.
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

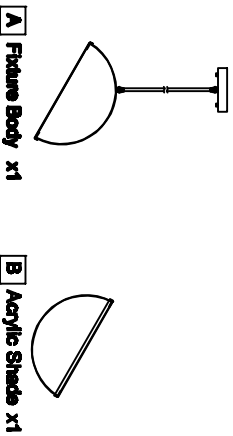

Hardware Contents

PART	DESCRIPTION	QUANTITY
AA	Decorative Caps	2pcs
BB	Mounting Screws	2pcs
CC	Outlet Box	1pc
DD	Mounting Bracket	1pc
EE	Mounting Bracket	1pc

STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting Bracket.
 A. Line up a set of holes on the Mounting bracket(EE) and Holes on the Backplate.
 Thread Mounting Screws (BB) into the holes on the Mounting bracket (EE). Push Lock Washers and Thread Hex Nuts onto the Mounting Screws (BB).
 Hand tighten unit snug.

Figure 1

STEP 2 - Attach Mounting Bracket to Outlet Box
 A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws.
 Tighten unit snug.

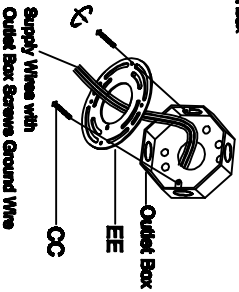


Figure 2

STEP 3 - Fit Backplate to Mounting Bracket Assembly
 A. Fit the backplate to Mounting Screws (BB) and secure with Decorative Caps (AA). Note: The backplate should be snug against the coating and the Decorative Caps (AA). If not, adjust the length of the Mounting Screws (BB) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (BB) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the Coating Canopy is secure, remove the Decorative Caps (AA) and Coating Canopy and proceed to step 4

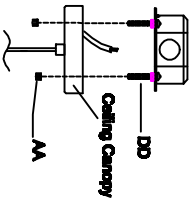


Figure 3

STEP 4 - Wire Connections
 A. Use standard wire connectors to make all wire connections. Twist connections until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the outlet box.

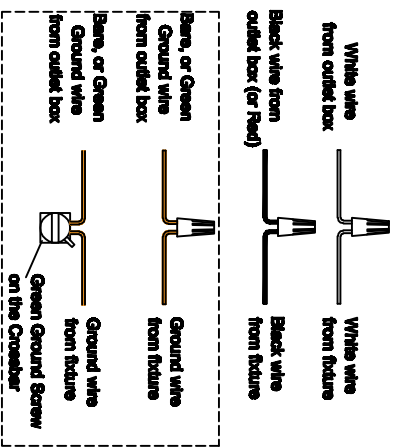


Figure 4

STEP 5 - Install Coating Canopy to Coating
 A. Carefully tuck all wires into the outlet box and position the Coating Canopy of the Fixture Body (A) over the outlet box. Align the Holes in the Coating Canopy with the Mounting Screws (BB). Secure with Decorative Caps (AA) and hand tighten unit snug.

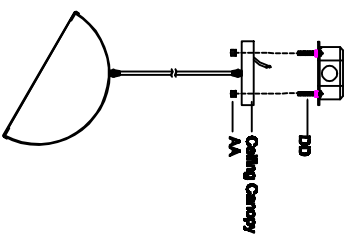


Figure 5

STEP 6 - Install Bulbs and Acrylic Shade.
 A. Install bulbs (Not Include) onto sockets and push snug into place.
 B. Line up the three rectangular holes on Acrylic Shade with the three Screws on the Fixture Body, press them then twist about 15 degree to let them combined together tightly.

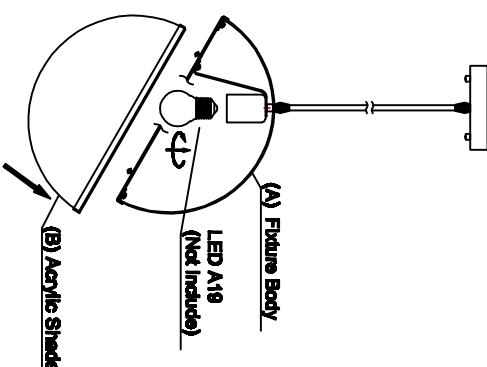


Figure 6