# Assembly Instruction Sheet #IS-9699P41-6 For Style 9699P41-6

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (6) E26 Base Bulb 60W Maximum (Not include).

Estimated Assembly Time: 15-30 minutes

Preparation: identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

## **▲Warnings and Cautions**

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

#### **Package Contents**



A Fixture Body x1

### **Hardware Contents**

PART	DESCRIPTION	QUANTITY	7	
AA BB CC DD	Decorative Cape Electrical Marrata Outlet Box Screw Mounting Screw	2000		
		2ров		
		2000		
		2pcs		
EE	Mounting breaket	1pcs		
M	BB	CC	_ DD	建
_	ATTN	습	當	15 N
≘	<i>)</i> U U\		8	
				_

STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracket.

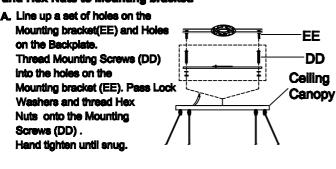


Figure 1

#### STEP 2 - Attach Mounting bracket to Outlet Box

A\_Pass the supply wires through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you.

Secure it with Outlet Box

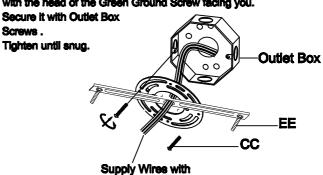


Figure 2

**Outlet Box Screws Ground Wire** 

#### STEP 3 - Fit Backplate to Mounting bracket Assembly

A. Fit the backplate to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The backplate should be snug against the ceiling and the Decorative Caps (AA).

If not, adjust the length of the Mounting Screws (DD) by unacrewing the Hex Nut and Lock Washer and then acrewing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the Celling Canopy is secure, remove the Decorative Caps (AA) and Celling Canopy and proceed to Step 4




Figure 3